Front passenger seat temperature air vent motor




Before repairing any electrical parts, starting switch power mode must be set to OFF state, and all electrical loads must be OFF, unless otherwise specified in the operation procedure. If any tool or equipment is easy to contact any exposed live electrical terminal, disconnect the negative battery cable, too. Any violation of these safety instructions may result in personal injuries or damages to the vehicle and its components.

NOTE


- There might be some differences on illustrations of this program, and you are advised to the vehicle configuration, but the basic information is always correct.
- There might be some parts that are not displayed on the illustration. That will help display the main parts more clearly.

Removal

- 1. Remove the front footwell duct RH. See: Front row air duct footwell RH
- 2. Disconnect the harness connector of front passenger seat temperature air vent motor.

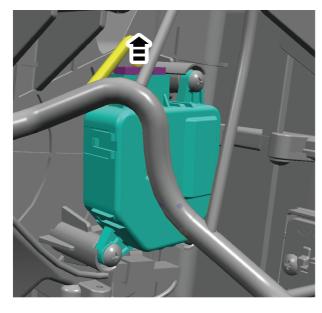

3. Remove 3 mounting screws of front passenger seat temperature air vent motor, and remove the front passenger seat temperature air vent motor.

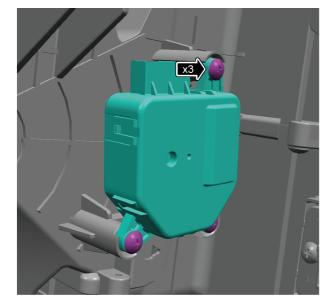

Installation

- 1. Install the front passenger seat temperature air vent motor, and install 3 mounting screws of front passenger seat temperature air vent motor.
- 2. Connect the harness connector of front passenger seat temperature air vent motor.
- 3. Install the front footwell duct RH. See: Front row air duct footwell -